


LUXART

Parts List

No.	Part Name	Part No.
1-a	Metal Handle Assembly-Cold	A662189C
1-b	Metal Handle Assembly-Hot	A662189H
2	Screw (M4 *5 mm L)	A008640
3	Screw (3/16" -24 * 1-1/4" L)	A008109
4	Stem Extension	A110362
5	Handle Base	A663382
6	O-Ring (Φ1-3/16" ID *Φ1-3/8" OD)	A048028
7-a	Handle Adaptor - Cold	A110339CZ N
7-b	Handle Adaptor - Hot	A110339HZ N
8	Retainer Nut	A016022
9	Washer	A200013
10-a	Ceramic Disc Cartridge-Cold	A507104N
10-b	Ceramic Disc Cartridge-Hot	A507103N
11	Spout Trim Ring	A663383
12	O-Ring (Φ1-1/4" ID *Φ1-3/8" OD)	A072063
13	O-Ring (Φ9/16" ID *Φ11/16" OD)	A004021N
14	Screw (3/16" -24 * 7/16" L)	A008017
15	Putty Plate	A011343NF
16	Lock Nut	A009007
17	Coupling Nut	A009016
18	Aerator	A500013N- 50
19	Pop-up Plunger Assembly	A663121
20	Washer and Nut	A663122
21	Pop-up Body	A605222
22	Lift Rod	A025415
23	Lift Rod Strap	A663521
24	Washer (Outer)	A200009
25	Ball Nut	A009063
26	Spring Clip	A120030
27	Ball Rod (6-5/16"L)	A026004
28	Washer (Inner)	A200109
29	Hex Wrench (H2 * 17L mm * 49L mm)	A031003NI

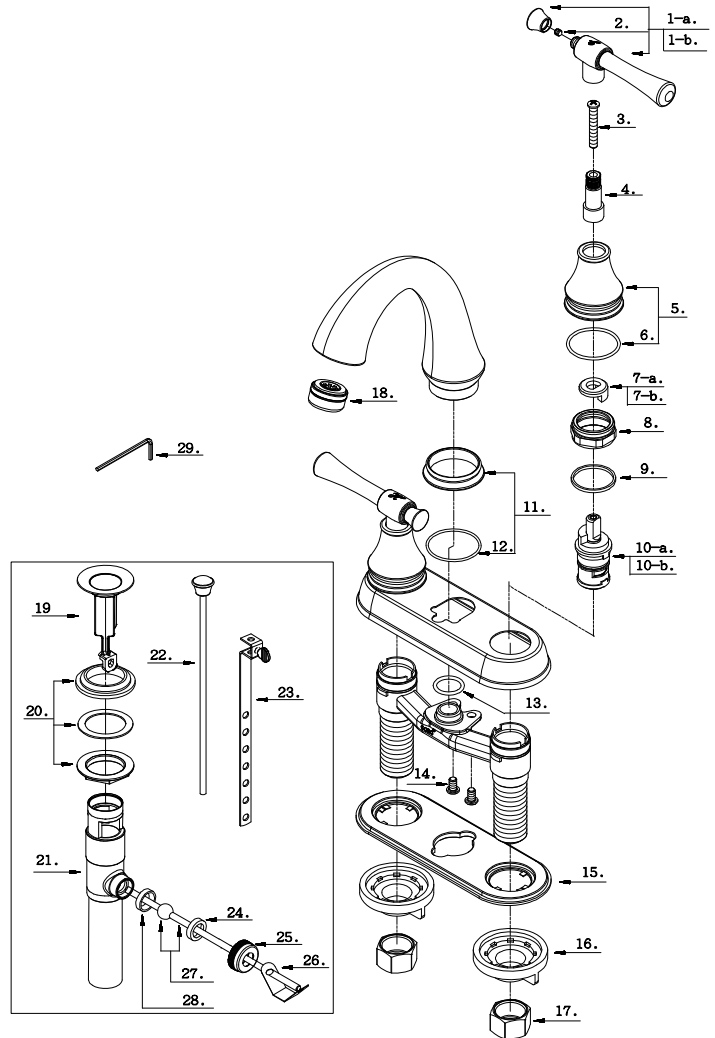

For replacement parts,
or technical assistance, please call (888) 328-2383

Faucet Specifications

