


LUXART

Parts List

NO.	Part Name.	Part No.
1-a	Metal Handle Assembly - Cold	A662189C
1-b	Metal Handle Assembly -Hot	A662189H
2	Screw (M4 *5 mm L)	A008640
3	Screw (3/16" -24 * 1-1/4" L)	A008109
4	Handle Adapter	A110362
5	Handle Base	A018765
6-a	Handle Adaptor-Cold	A110339CZN
6-b	Handle Adaptor-Hot	A110339HZN
7	Retainer Nut	A016022
8-a	Ceramic Disc Cartridge - Cold	A507104N
8-b	Ceramic Disc Cartridge - Hot	A507103N
9	Handle Trim Ring	A667592
10	O-Ring (1-3/8" ID, 1-1/2" OD)	A072055
11	Handle Valve Body	A066010N
12	Mounting Hardware	A603171
13	Coupling Nut	A009016
14	Aerator	A500013N-50
15	O-Ring (3/8" ID, 1/2" OD)	A004026N
16	Spout Trim Ring	A667593
17	Mounting Hardware	A603233
18	"Y" Adaptor	A015004N
19	Supply Hose	A105093N
20	Hex Wrench (H2, 17 mm L x 49 mm L)	A031003
21	Pop-up Plunger Assembly	A663121
22	Washer and Nut	A663122
23	Pop-up Body	A605222
24	Lift Rod	A025414
25	Lift Rod Strap	A663521
26	Washer (Outer)	A200009
27	Ball Nut	A009063
28	Spring Clip	A120030
29	Ball Rod (8-1/2" L)	A026005
30	Washer (Inner)	A200109
31	Spout Assembly	A606309N

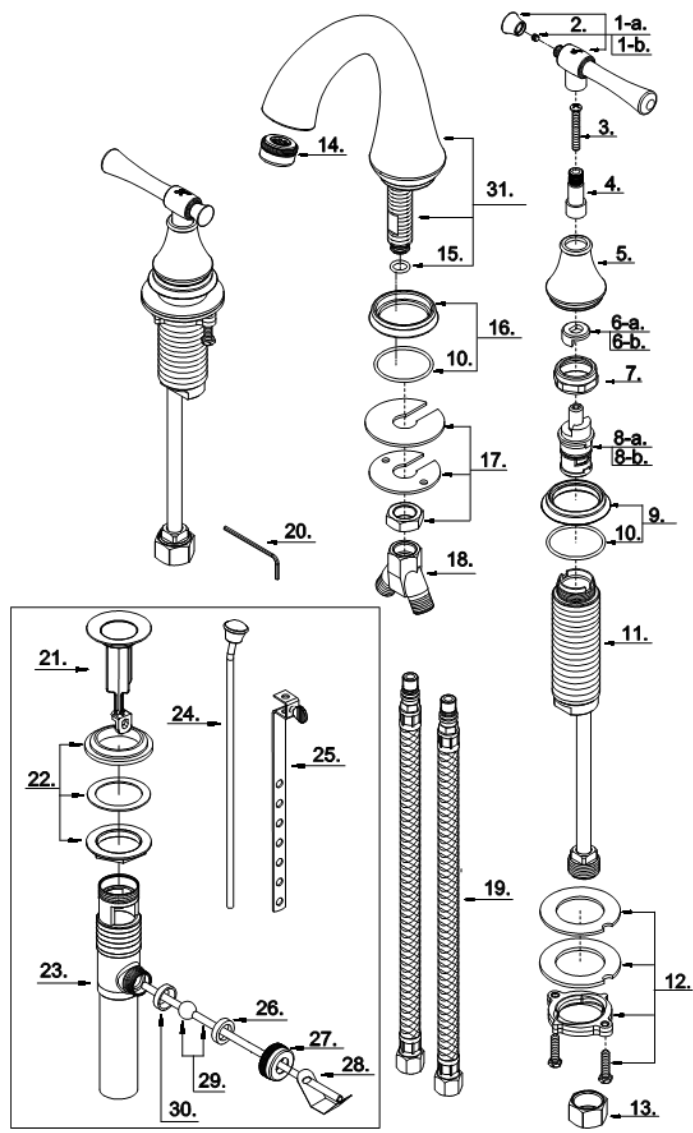

For replacement parts,
or technical assistance, please call (888) 328-2383



Faucet Specifications